 



BEARING GREASE CHANGER

GR-936 series


Now, wheel bearings on large-sized vehicles and trailers can be lubricated with grease at a single touch! Old grease can be extracted without removing the bearings, and when grease hardens under colder conditions, it can be replaced easily, without getting your hands dirty.

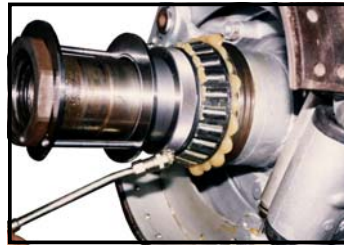

 
Old grease can be extracted directly into a plastic bag, so your hands stay completely clean.

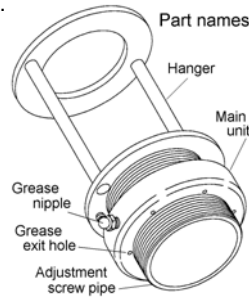

How this product is used

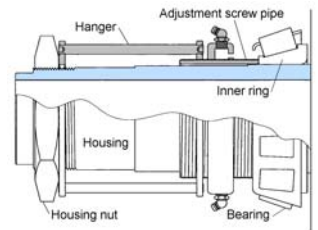

* First, the tip of the adjustment screw pipe is brought in contact with the inner ring of the bearing, and is secured with the housing nut to keep grease from leaking to the housing side.

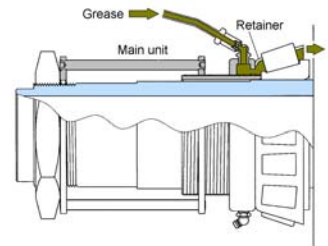

* The main unit is rotated to close the gap between the main unit and the retainer.

Outline of applicable products (product codes in the table indicate applicable bearing numbers)

Code	G50	G55	G60	G65	G75	G85	G90	G95	G100	G105
Fuso		4t front, TR11104	6t front, 32312	8t ~ front, TR131305	4t rear, 32215		6t rear, 32218	8t ~ rear, TR191604	3 2 2 2 0 trailers, etc.	3 2 2 2 1 trailers, etc.
Hino	4t front, 30310			6t ~ front, 30313	4t rear 32215	6t rear, 32217	8t ~ rear, 32218			
UD		4-6t front, 32211		8t ~ front, 30313	4t rear 32215	6t rear, 32217	8t ~ rear, 32218			