



HUB BEARING PULLER

TBP-600



This tool is used to install and remove the outer races from hub (wheel) bearings, as well as for hub press-fitting. This screw-type puller eliminates the need for presses and slide hammers.

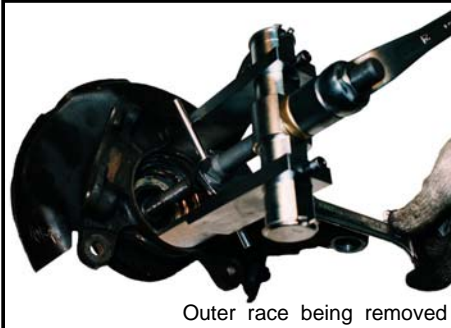


Outer race being removed

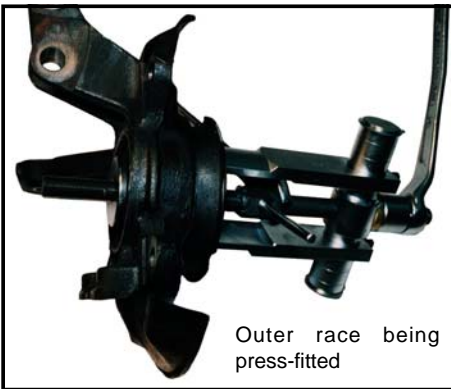

Outer race being press-fitted

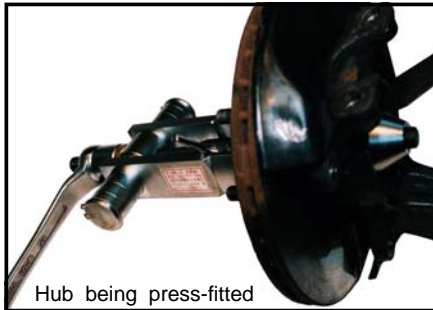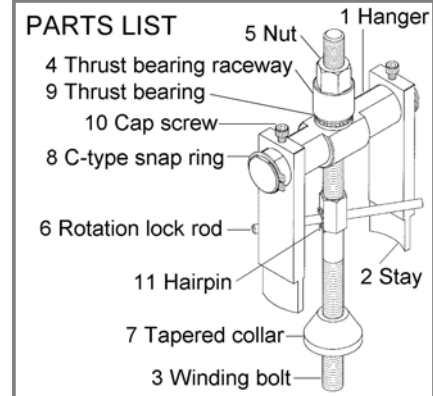

Hub being press-fitted

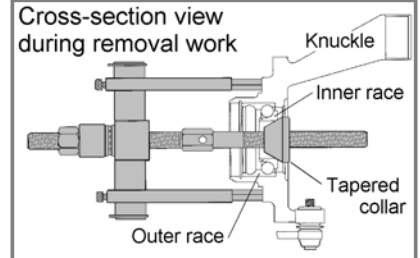

This puller is designed exclusively for unit-type bearing races (used in most of today's vehicles). (Hub insertion is also possible with detachable types.)

