

BRAKE SPRING TOOL

model : BS-201 for passenger vehicles

- This tool is used to install and remove shoe holding springs and tension springs for parking brake shoes. Designed in the style of a cross wrench, it is fitted with a magnetic sheet that ensures no more lost retainers.



↑ Inserting and removing shoe hold spring



↑ Removing tension spring




↑ Installing tension spring

Applicable retainers:

(16 on the small diameter side, (20 on the large diameter side
In the 2t vehicle class, the HBSP-931 should be used.

Also, this model does not apply to plate spring types. In this case, the HBSP-612 should be used.

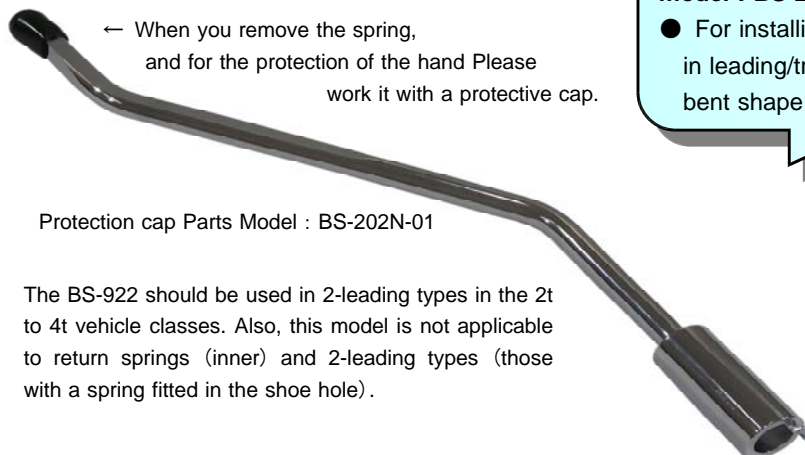


← When you remove the spring,
and for the protection of the hand Please
work it with a protective cap.

Protection cap Parts Model : BS-202N-01

The BS-922 should be used in 2-leading types in the 2t to 4t vehicle classes. Also, this model is not applicable to return springs (inner) and 2-leading types (those with a spring fitted in the shoe hole).

model : BS-202 for large-sized vehicles

- For installing and removing return springs (outer) in leading/trailing brakes and parking brakes. The bent shape makes installation particularly easy.

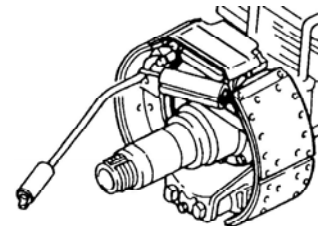

MARKETING DIVISION

HASCO CO., LTD.

MANUFACTURE

HAYASHI SEIKO CO., LTD.

Issued april 2009 No.M201-E2

SALES DEPT. 3-6-45 SAKAE-CHO ASAKA-CITY SAITAMA 351-0012 JAPAN

TEL + 81-48-461-0101 FAX +81-48-461-1177