



Compact-car type

Standard type For use on 134 (-) minus (negative) side, 11.1 For use on 134 (+) plus (positive) side, 12.7 Large-capacity type For use on 135 (-) minus (negative) side, 16.0

For use on 135 (+) plus (positive) side, 17.5

BTC-629

Now you ' re ready to go to work, just by opening the hood! Terminals contained in set: